


RM5118R - 41AY80AG983 , 41AY80AS983


Contact Us at: www.PartsFor.com for Replacement Parts.

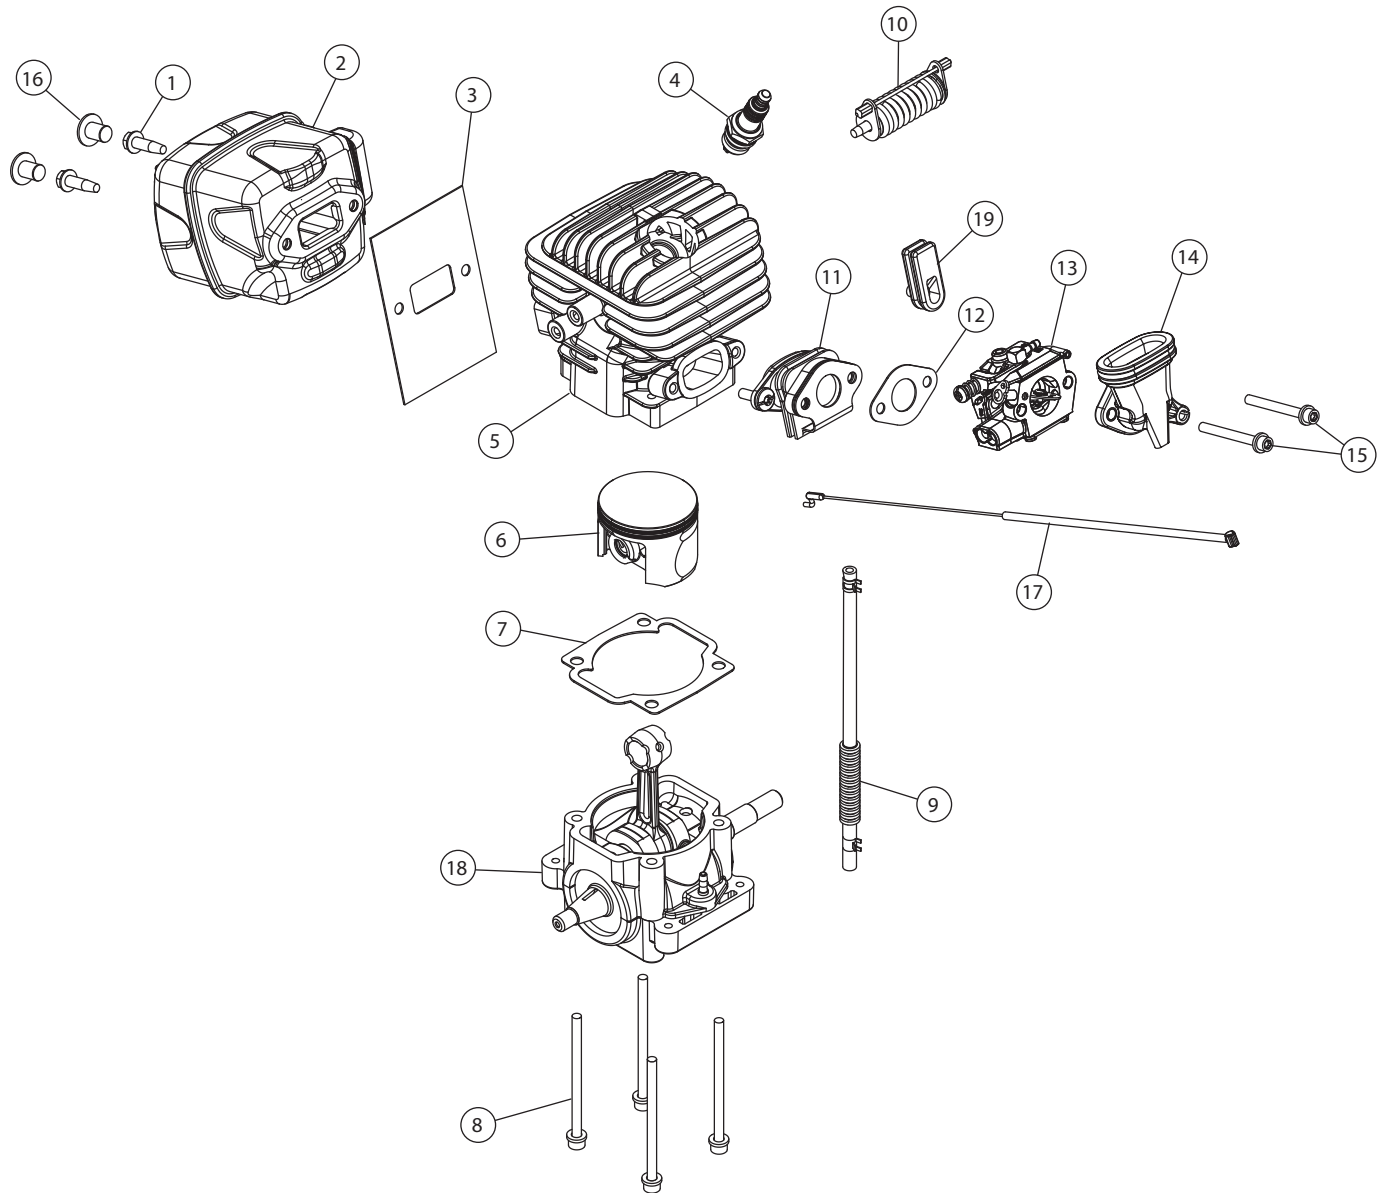

Item	Part No.	Description	Item	Part No.	Description
1	753-06397	Muffler Screw	11	753-06727	Insulator Assembly
2	753-06268	Muffler Assembly (includes 1, 3 & 19)	12	753-06406	Carburetor Gasket
3	753-06398	Muffler Gasket	13	753-06728	Carburetor
4	753-06269	Spark Plug	14	753-06385	Boot & Bracket Assembly (includes 16 & 17)
5	753-06724	Cylinder Assembly (includes 6, 8 & 10)	15	753-06410	Carburetor Hardware
6	753-06725	Piston Assembly	16	753-06411	Grommet
7	753-06400	Cylinder Gasket	17	753-06409	Throttle Cable
8	753-06402	Cylinder Hardware	18	753-06729	Shortblock Assembly (includes 4 - 10)
9	753-06726	Breather Hose w/clamp	19	753-06507	Muffler Plug
10	753-06404	Isolator Assembly			

RM5118R - 41AY80AG983 , 41AY80AS983

Contact Us at: www.PartsFor.com for Replacement Parts.

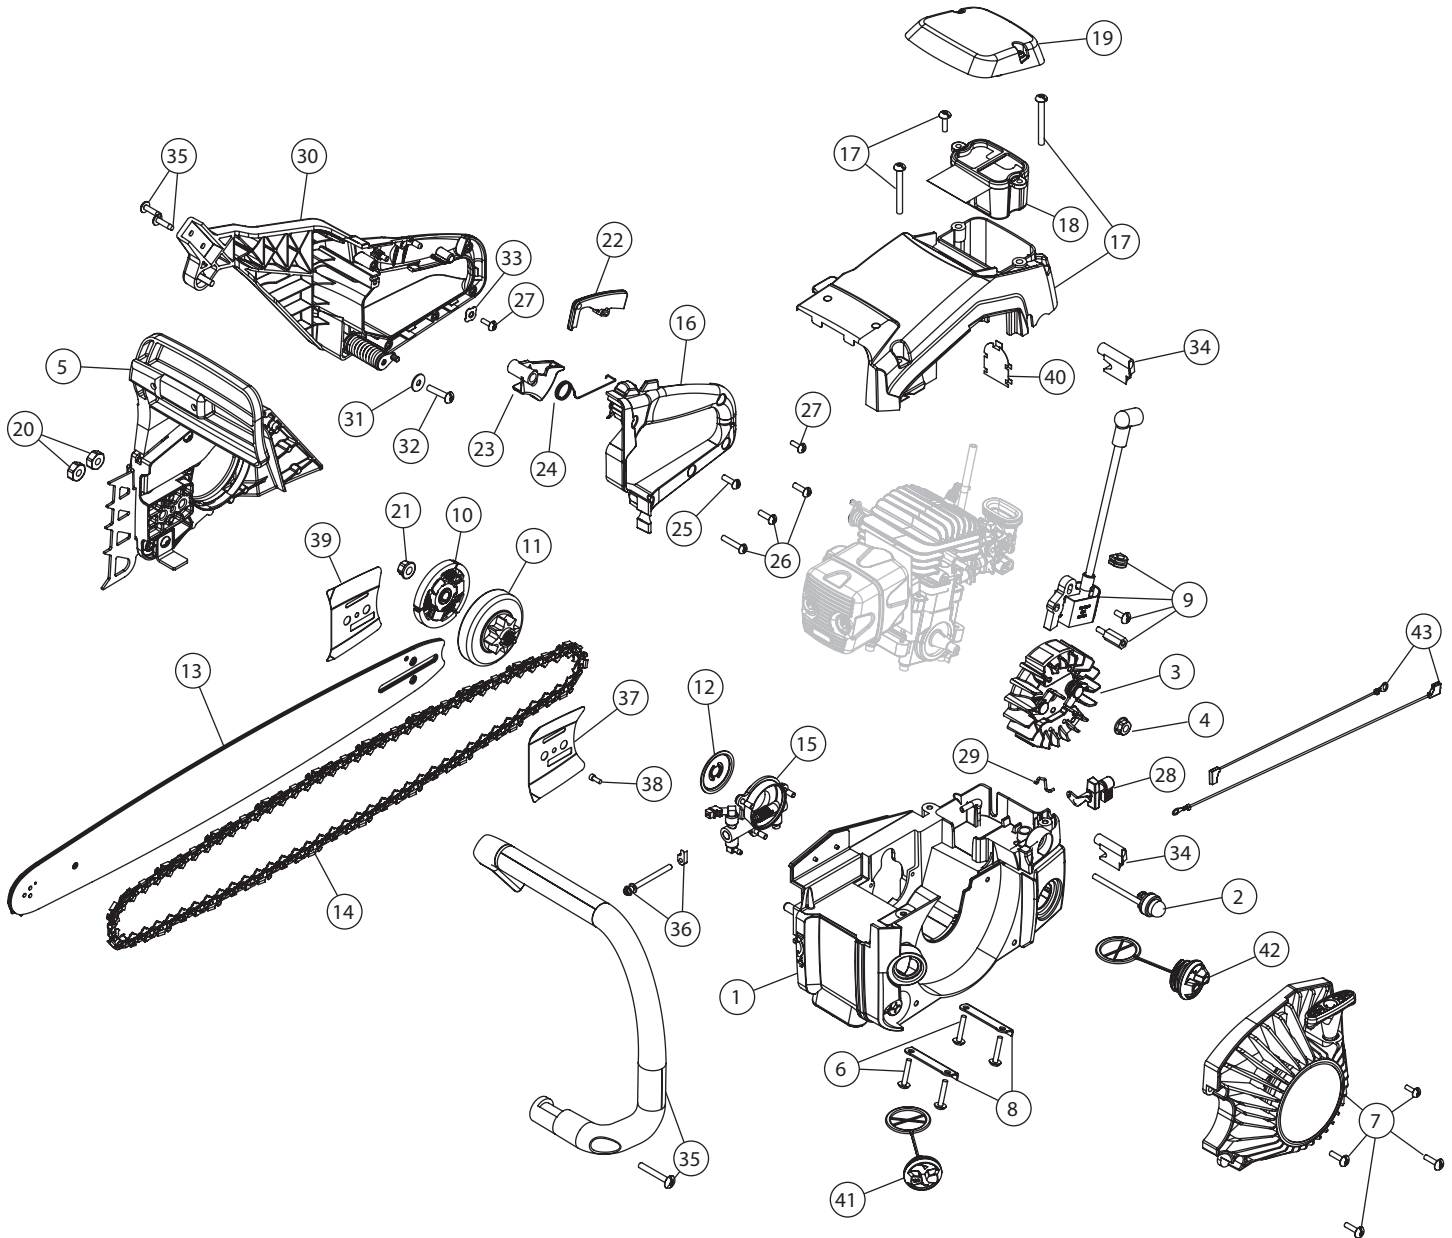

Item	Part No.	Description
1	753-06730	Housing Assembly (includes 2, 41 & 42)
2	753-06425	Primer Bulb Assembly
3	753-06426	Flywheel Assembly
4	753-06427	Flywheel Nut
5	753-06973	Chain Brake Assembly
6	753-06429	Engine Mount Screw
7	753-06974	Starter Housing Assembly
8	753-06431	Engine Mount Plate Assembly (includes 6)
9	753-06432	Module Assembly
10	753-06449	Clutch
11	753-06450	Clutch Drum Assembly
12	753-06451	Oil Pump Shield
13	753-06733	Bar
14	753-06265	18" Chain
15	753-06387	Oil Pump Assembly
16	753-06734	Rear Handle Cover Assembly w/switch
17	753-06456	Top Cover Assembly (includes 40)
18	753-06457	Air Cleaner Assembly
19	753-06458	Air Cleaner Cover Assembly
20	753-06460	Bar Nut
21	753-06461	Clutch Nut
22	753-06735	Trigger Release
23	753-06736	Throttle Trigger

Item	Part No.	Description
24	753-06466	Trigger Release Spring
25	753-06467	Upper Grip Screw
26	753-06468	Lower Grip Screw
27	753-06470	Throttle Clamp Screw
28	753-06737	Choke Lever Assembly
29	753-06474	Choke Rod
30	753-06738	Rear Handle Assembly
31	753-06477	Grip Anti-vibration Washer
32	753-06478	Grip Anti-vibration Screw
33	753-06479	Throttle Clamp Washer
34	753-06739	Boot
35	753-06483	Handle Assembly
36	753-06484	Tension Screw & Nut Assembly
37	753-06740	Inner Guide Plate
38	753-06487	Guide Plate Screw
39	753-06488	Outer Guide Plate
40	753-06504	Screen
41	753-06505	Oil Cap
42	753-06741	Fuel Cap
43	753-06510	Ground Wire
*	Items Not Shown	
*	753-06489	Case
*	753-06490	Wrench